



SERVICING EVAPORATIVE COOLERS

- ! Insert replacement blower wheel (Make sure the of direction of vanes curve towards duct opening).
- ! Insert shaft, add leather washer after inserting shaft thru bearing assembly. Insert shaft thru both blower wheel hubs, add leather washer and insert shaft thru bearing. (washer goes between wheel hub & bearing.)

!

•

•

- Install motor to motor cradle . Install motor so that the vent holes are in the downward position. This allows any water to dip from the motor (1) - 1 (motor) ca - 1 (ore) -



- **Check input voltage, Check L1 on relay**

STAND PIPE ASSEMBLY



**THANK YOU FOR YOUR
TIME AND ATTENTION.**